



## Powered Soundbar System Quick Setup Instructions:

### **CONNECTIONS & SETTINGS:**

- For proper system setup, connect all video devices (Blu-ray/DVD, Cable/Satellite Box, Game Console, etc.) directly to the TV (not the Soundbar), and connect the TV's audio output (digital or analog) to the Soundbar. The extra inputs on the Soundbar are for other audio only sources (portable music player, laptop, CD player, etc.), not video sources, as these are best handled by the TV itself.
- Install the batteries into the remote and connect the 12V power supply to the Soundbar.

### **Connecting to your TV's Digital (Toslink) Audio Output:**

- 1) Use the included optical cable to connect your TV's digital audio output (usually located on the rear connection panel) to the 'Digital' input on the rear of the Soundbar.
- 2) Set your TV's digital audio output type to 'PCM' via the TV's menu (consult your TV's manual if needed).
- 3) Disable the TV's Speakers through the TV's menu. If you are unable to do so, simply turn the TV's volume all the way down.
- 4) Using the control panel on the Soundbar: Select the 'Digital' input & turn the Volume up to a satisfactory level. Using this connection type you must use the Soundbar remote to control the volume.

### **Connecting to your TV's Headphone Output:**

- 1) Use the 1/8" to 1/8" connection cable to connect your TV's headphone output jack (usually located on the side) to the 'Aux1' input on the rear of the Soundbar.
- 2) Using the headphone jack should automatically disable the TV's internal speakers. If not, disable them via the TV's menu (see Note below).
- 3) Using the control panel on the Soundbar: Select the 'Aux1' input & turn the Volume up to ~40. Using this connection type you may simply continue to use your TV remote to control the volume and do not need to use the Soundbar remote except to access its specialized functions.

### **Connecting to your TV's RCA Outputs:**

- 1) Use the included Stereo RCA to 1/8" connection cable to connect your TV's RCA audio outputs (usually located on the rear connection panel) to the 'Aux1' input on the rear of the Soundbar.
- 2) Set the TV's audio output type to 'Variable', or use Variable RCA outputs if available (consult your TV's manual). If your TV only has Fixed RCA outputs, please skip to 'Fixed RCA Outputs' section below.

### Variable Outputs:

- 3) Disable the TV's internal speakers via the TV's menu (see Note below).
- 4) Using the control panel on the Soundbar: Select the 'Aux1' input & turn the Volume up to ~40. Using this connection type, you may simply continue to use your TV remote to control the volume and do not need to use the Soundbar remote except to access its specialized functions.

### Fixed RCA Outputs:

- 3) Disable the TV's Speakers through the TV's menu. If you are unable to do so simply turn the TV's volume all the way down.
- 4) Using the control panel on the Soundbar: Select the 'Aux1' input & turn the Volume up to a satisfactory level. Using this connection type you must use the Soundbar remote to control the volume.

**Headphone / Variable RCA Connection Note:** Turning the TV volume down will not work as this will result in no output on the headphone or RCA jacks for the Soundbar! If you are unable to turn off your TV's speakers and are connected to its RCA outputs please try using the headphone output instead.

### **Wireless Subwoofer:**

If your system comes with a Subwoofer, connect the 18V power supply to it and turn it on. Within a minute or so your Subwoofer should wirelessly 'Pair' with the Soundbar and its Blue LED will stop blinking. Otherwise, press the Subwoofer Pair button for ~10 seconds until its Blue LED starts blinking rapidly then press the Pair button on the Soundbar or Remote (Soundbar display will show 'Pair'). Pairing should occur within a minute or so.

TO ENSURE THE BEST SYSTEM PERFORMANCE PLEASE READ THE INCLUDED OWNER'S MANUAL.